



ASSEMBLY OF RADIANT PEDESTALS

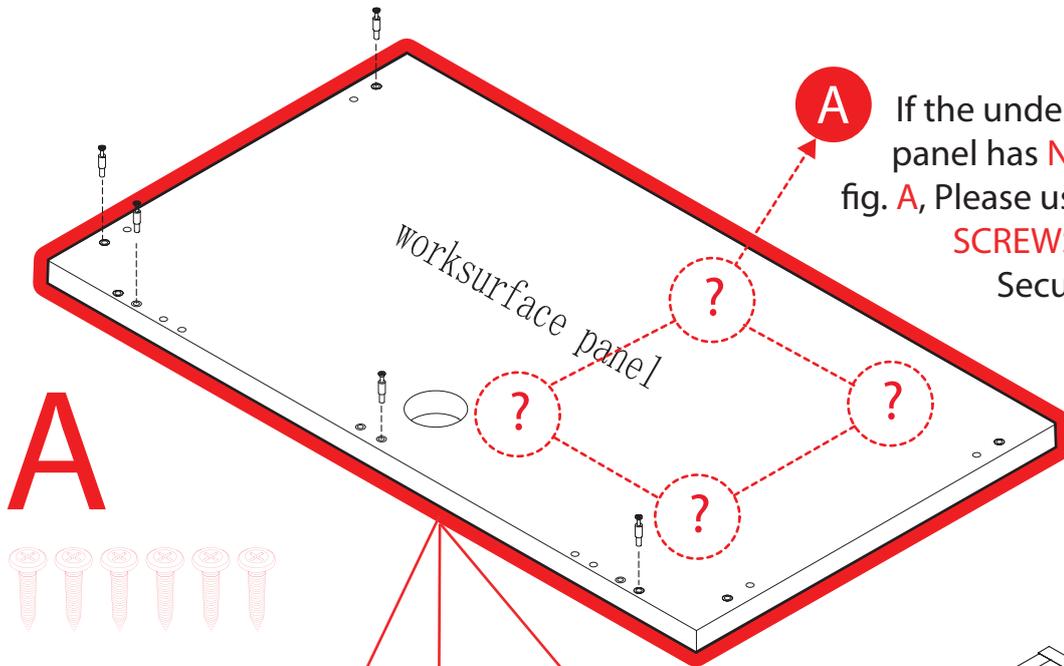

A If the underside of the worksurface panel has **NO HOLES(?)** as shown in fig. A, Please use the provided **6 WOOD SCREWS** to attach the pedestal. Secure the pedestal by the 6 smaller screw holes in the Pedestal.

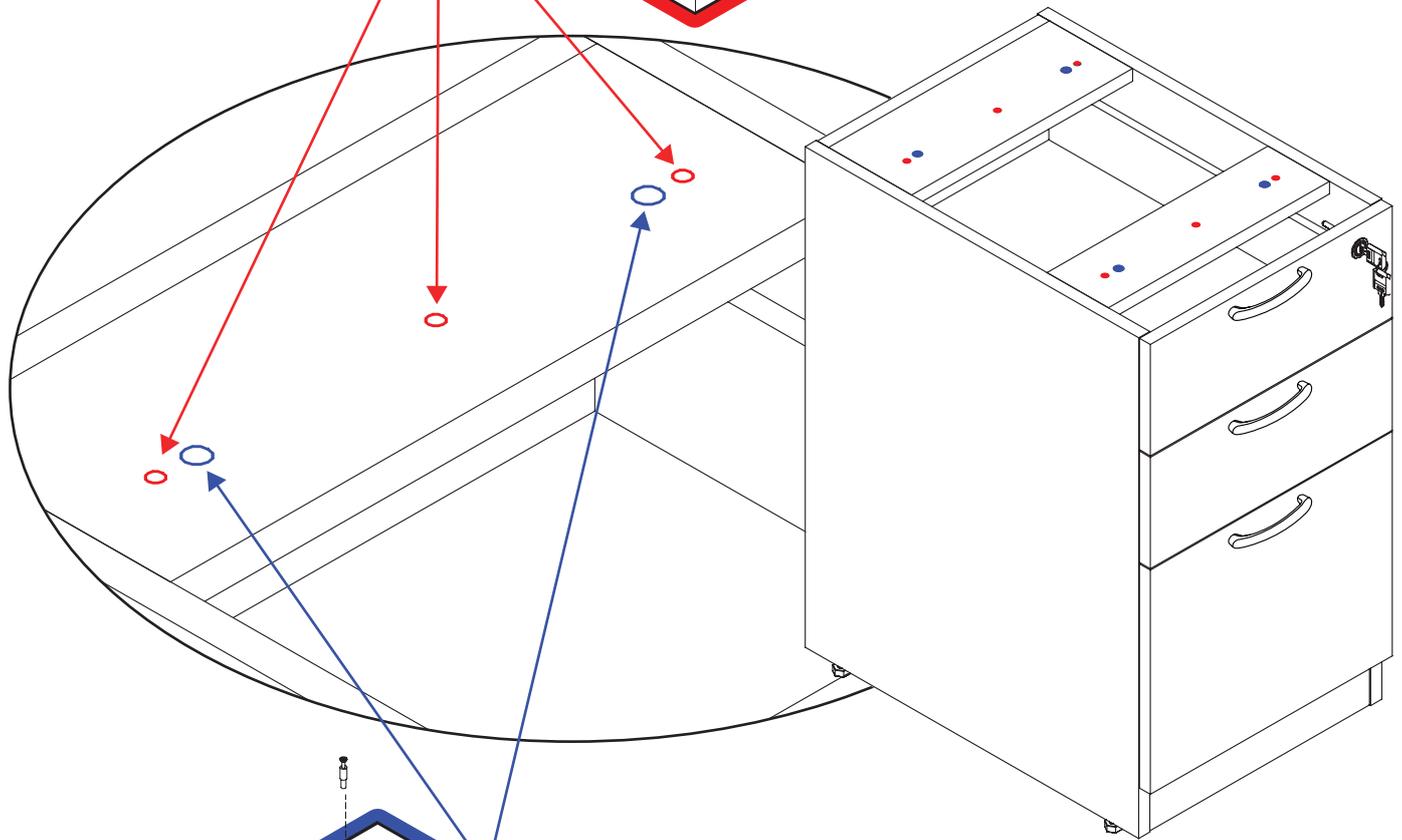

B If the underside of the worksurface panel has **BOLT HOLES** as shown in fig. B, please use the provided **4 BOLTS & WASHERS** to attach the pedestal to the left or right side of the panel. Secure the pedestal by the **4 LARGER BOLT** holes in the pedestal.

B

