






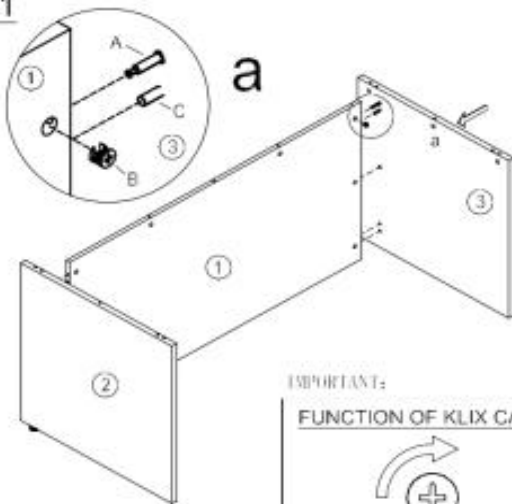


Product Specifications


30" Deep x 60" to 71" Wide Standard Desk Shell

TUN010CL	TUN011KC		TUN021AG	TUN013LB	TUN018SC	TUN015BG
A  Cam Lock 14Pcs+2Pcs(spare)	B  Klix Cam 14Pcs+2Pcs(spare)	C  Dowel 9Pcs+2Pcs(spare)	D  Adjustable Glide 4Pcs	E  6 Hole L-Bracket 5Pcs	F  Screw #4x5/8 30Pcs+5Pcs(spare)	G  60mm Black Grommet 2Pcs




STEP1



STEP2

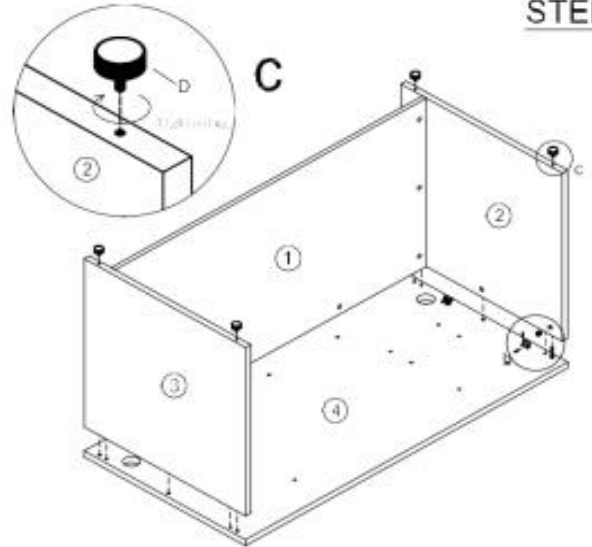

STEP3

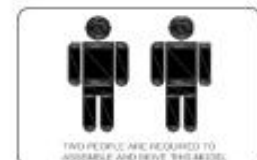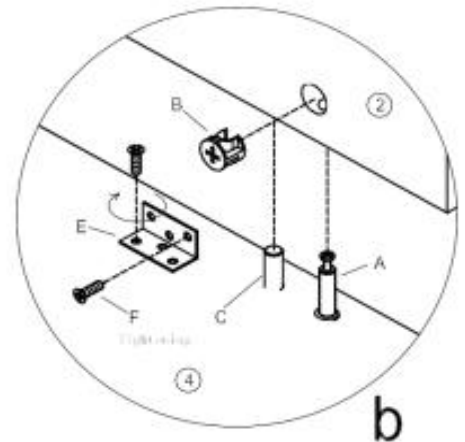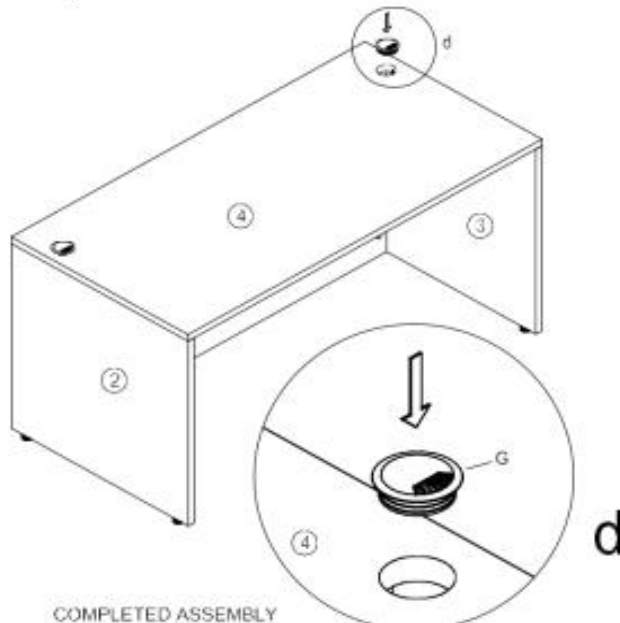

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.