



# Installation/CAM-UniversalPBF OR RDT-UniversalPBF

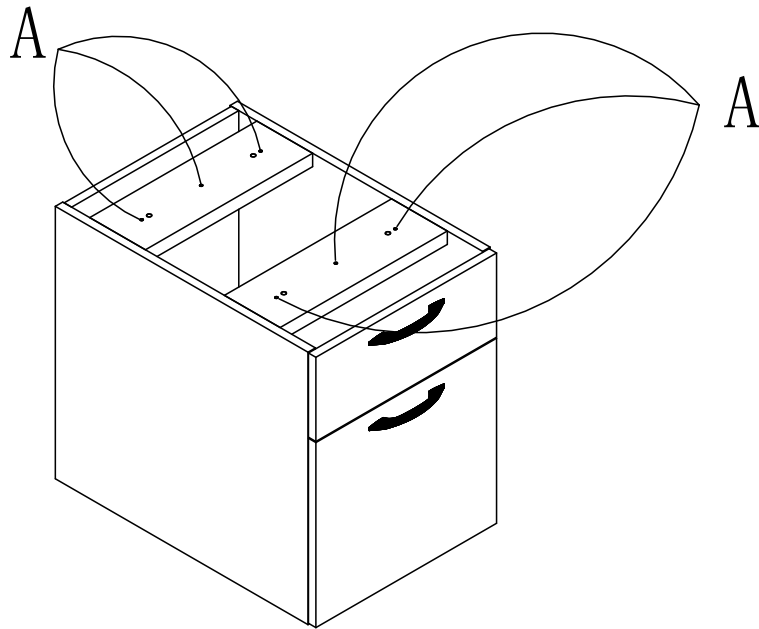

If the underside of the worksurface panel is larger than 25mm as shown in figure A, Please use the 6 provided WOOD SCREWS to attach the pedestal. Secure the Pedestal by the 6 smaller Screw holes in the Pedestal.

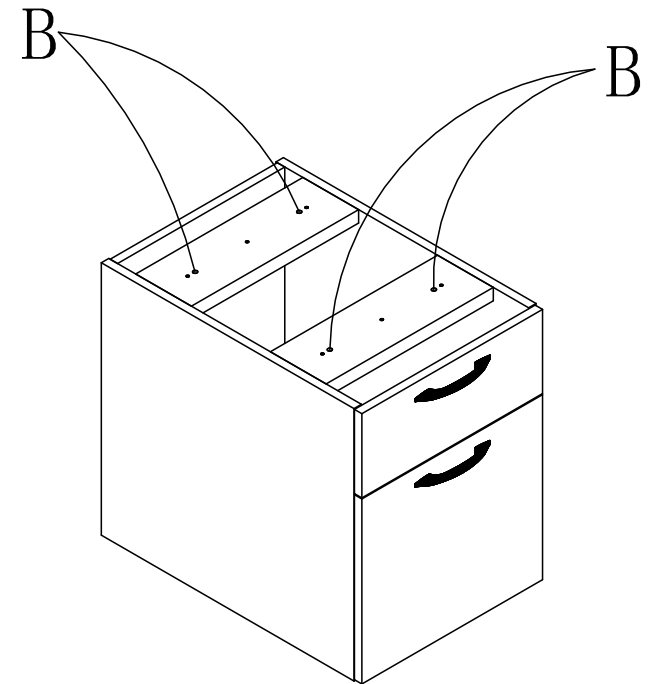

If the underside of the worksurface panel has BOLT HOLES as shown in figure B, Please use the 4 provided BOLTS & WASHERS to attach the pedestal to the panel. Secure the Pedestal by the 4 Larger BOLT holes in the Pedestal.

Accessory Kit: A  ST4X45 (X6)

B  M6X40 (X4)