






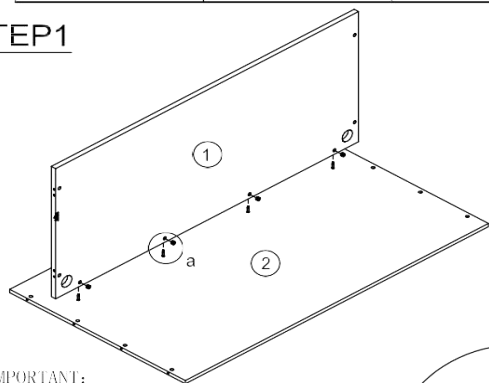


# Product Specifications

36" x 72" Reception desk

TUN010CL	TUN011KC		TUN021AG	TUN013LB	TUN018SC	TUN015BG
<b>A</b>  Cam Lock 22Pcs+4Pcs(spare)	<b>B</b>  Klix Cam 22Pcs+4Pcs(spare)	<b>C</b>  Dowel 9Pcs+2Pcs(spare)	<b>D</b>  Adjustable Glide 4Pcs	<b>E</b>  6 Hole L-Bracket 6Pcs	<b>F</b>  Screw #4*5/8" 36Pcs+5Pcs(spare)	<b>G</b>  60mm Black Grommet 2Pcs

## STEP1




IMPORTANT:

### FUNCTION OF KLIX CAM




1/4 RIGHT  
TURN FOR  
LOCKING



MAKE SURE THE ARROW IS  
POINTING UPWARDS  
BEFORE INSERTING INTO  
THE PANEL'S HOLE.

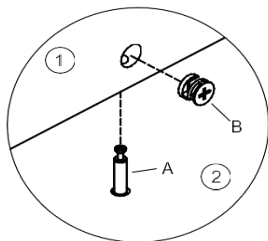


## STEP2

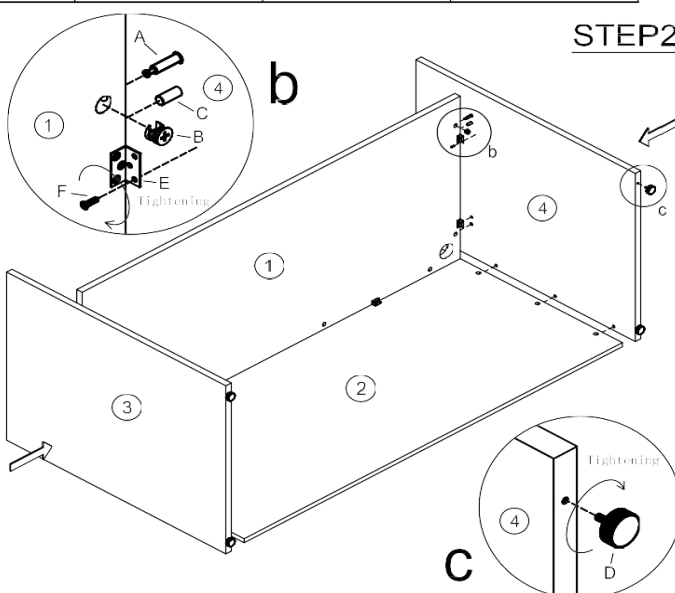

## STEP3

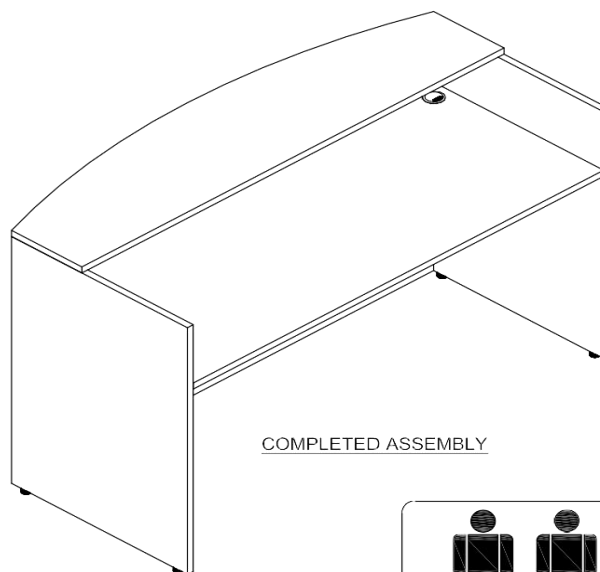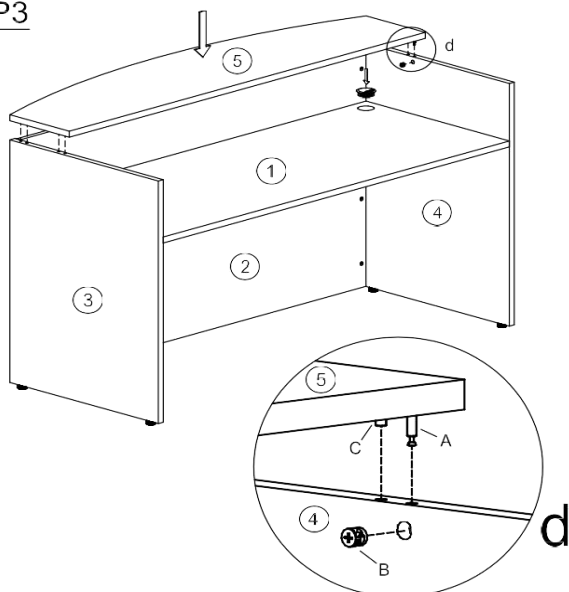

COMPLETED ASSEMBLY



### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.